Read before you play!

TAMAGOTCHI 4U+ PLUS

©BANDAI,WiZ

User's Guide

Contents

■The Product — 4
■First... The Birth of Tamagotchi — 5
■The Life of Tamagotchi — 7
■The Screen — 7
■Caring for Your Tamagotchi — 8
●Checkmeter — 8
●Connection — 11
●Odekake connection — 15
●Feed — 16
●Communication — 16
●Rooms — 17
●Going out — 18
●Treasure box — 20
●Memory — 21
■Replacing Batteries — 23
■Removing and Attaching Covers — 23
■Troubleshooting — 24
■The Start Button — 26
■Notices about Downloading — 27

BANDAI 2015 MADE IN CHINA

⚠WARNING

Dear Guardian,
Please read the followings.

●This product has small parts, which may be swallowed, and become a choking hazard. Not for children under 3 years of age.

⚠CAUTION

●Beware of swallowing, such as of AAA batteries (especially by children under 3 years of age).
●This product is equipped for wireless connection of radio waves. Placement and use may affect medical equipment. Do not use connection features in areas where radio use is prohibited.

《Misuse of batteries could result in heating, rupture, combustion, or leakage. Be cautious of the following.》

●Should liquid leaking from a battery come in contact with the eye, rinse immediately with a large amount of water and consult a physician. Should the liquid come in contact with the skin or clothing, wash with water.
●The batteries should be replaced by a guardian.
●Do not mix old and new batteries, or use different types of batteries together.
●Never use rechargeable batteries.
●Insert batteries the correct way, matching the + and -.
●Remove the batteries if the product is not to be played with for a long time. Leaving the batteries in presents the danger of leakage.

⚠CAUTION

●Do not short-circuit. The high current is dangerous.
●Stop use if the product or the battery becomes wet. This may cause a short-circuit.
●Do not place in water or fire, disassemble, or solder.
●When disposing, follow the instructions of your local government.

For ages 6 and up

《Precautions for use》

●There is no guarantee regarding loss of data due to misuse.
●Do not place in water or operate with wet hands. This may cause the product to break. Avoid use or storage in high humidity.
●This product is composed of precise electronic parts. Do not drop, get wet, soil, or disassemble. Avoid use or storage in high or low temperatures.
●Do not force or bend movable parts and attachable parts of this product in unintended directions.
●Clear cover, tray, and bag are packaging materials. Discard after opening.
●Do not place product on sofas, sheets, tiles or other objects made of plastic. Prolonged contact may cause color transfer.
●Press Start button in case of malfunction.
●Do not move product while connecting.
●Distance from the other device may impede connection.
●Strong radio waves or metal present in the area may obstruct connection.
●The included batteries are for testing purposes. Replace batteries when notification appears.
●Clock accuracy: 10 seconds per day
●This product is designated a type of inductive read-write communication equipment as specified under the Wireless Telegraphy Act of Japan.
Model: BAN-001

The Product

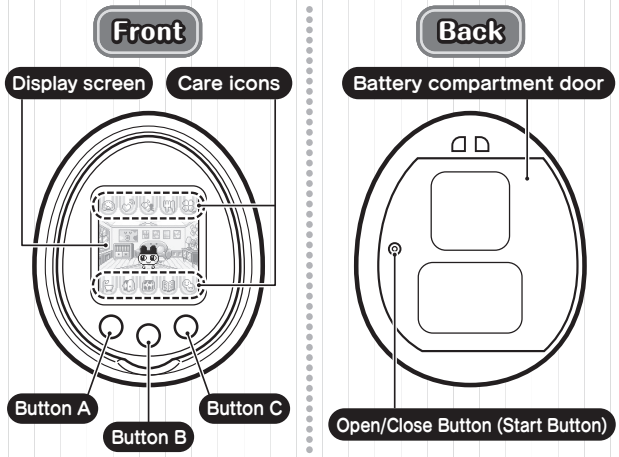

Basic operation	Button A	Button B	Button C
	Select	Execute	Cancel Back

Entering time and birthday	Button A	Button B	Button C twice
	Scroll to next number	Select, Move to next box	Return to previous selection

Button C and Button A
Scroll to previous number

* See P.6 for entering letters.

Do not place in water or operate with wet hands. This may cause the product to break. Avoid use or storage in high humidity.

First... The Birth of Tamagotchi

*** Follow the steps below to play with your TAMAGOTCHI 4U+.**

① Inserting Batteries

Requires 2 AAA batteries

Alkaline batteries are recommended.

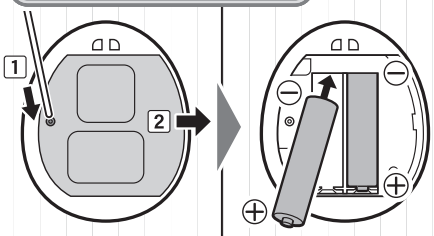

While pressing the Open/Close Button (Start Button) on the back of the product with a narrow point, slide the battery compartment door to open.

Insert the two AAA with the correct way, matching the + and -. Close the battery compartment door.
Properly closing the battery compartment door will push the Open/Close Button (Start Button). After about a minute after the sound, the time setting screen will be displayed. If no sound plays, press the Open/Close Button (Start Button) with a narrow point.

② Various Settings and the Birth of Tamagotchi

Setting the clock → Entering your birthday → Entering your name → The birth of Tamagotchi



Details on (→P.4) Details on (→P.4) Details on (→P.6)

Complete the settings, starting with the clock, and an egg will appear in the room. Tamagotchi will be born after about a minute!
*The gender is decided randomly. The same one may occur in a row.

Entering Letters



Cursor

①Move the cursor and select the box to enter a letter in. (The cursor will blink until a selection is made.)

Select box: Button B
Move the cursor to the next box: Button A
Move the cursor to the previous box: Button C

Current row

②Select the row with the letter you want.
*The menu is displayed in the following order: hiragana columns, symbols, smileys, katakana columns, numbers, alphabet, finish. (see (4) below).

Scroll to next row: Button A
Select row: Button B

③Move the cursor and select the letter.

Scroll to next letter: Button A
Select letter: Button B

④Select「はい」(yes) on the confirmation screen to finish editing.



Confirmation screen

●There are three ways to get to the confirmation screen:
- Scroll to「↵」(finish) while scrolling between rows and press Button B.
- Move the cursor to the last box and press Button A.
- Select a letter for the last box and press Button B.

●**Energy-saving mode** After 30 seconds no button has been pressed, the screen turns off to go into energy-saving mode. Press any button to back to play mode.

The Life of Tamagotchi

Tamagotchi changes in appearance and characteristics as it grows.
It changes according to how you take care of it! The time it goes to sleep depends on the type of Tamagotchi it has grown up to be. Keep an eye on it!

Sample growth pattern

It could change further depending on care....

Other looks···!?

*You can't provide care while it's sleeping.

The Screen

Move to the yard and the clock from the Regular home screen.

<Regular home screen>

<Yard home screen>

Events could happen!?

<Clock screen>

Button B (returns to Regular home screen)

Button B when no Care icons are selected

Caring for Your Tamagotchi

Use the various Care icons to take care of your Tamagotchi!

Button A: Scroll between Care icons Button B: Select

●Press Button C on the Regular home screen. Tamagotchi may do something!

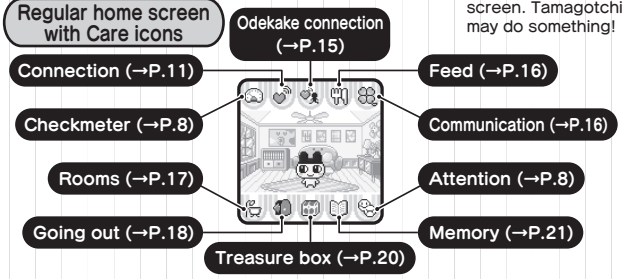

The Attention

Tamagotchi will call you when it wants to be cared for. Select the matching Care icon to take care of it!

The Attention is on!

Checkmeter

Check the status of your Tamagotchi and fill out your profile!



Character Status
Profile
Settings

First, scroll to the item you want to look at and select it. Look at the current status of your Tamagotchi and fill up your profile.

Character Status

Check often to see how to care for it!

Button A: switch screens

Tummy meter: how hungry it is

Happiness level: how close it is to you

Tamagotchi status (1)

●To increase the tummy meter, go to "Feed" and select "Meals". And to increase the happiness level, go to "Feed" and select "Treats" or go to "Treasure Box" and select "equipment".

Tamagotchi name — **Gender** — **Age:** increases by 1 per day — **Weight** — **Gotchi points:** money on Planet Tamagotchi (maximum 99,999 points)

Tamagotchi status (2)

Basic skills: Daily habits it has learned

○See P.10 for details!

Tamagotchi status (3)

Applied skills: special skills it has learned at school

Item name: the items which the Tamagotchi love.

○See P.10 for details!

Tamagotchi status (4)

Profile — Fill out your profile!

Button A: switch screens
Button B: set profile

* Make sure to fill out your profile! It's needed for connection with your friends and for communication with your Tamagotchi.

Name — **Gender** — **Mood today**

Your profile (1)

Birthday — **Age** — **Zodiac sign** — **Interest**

Your profile (2)

Future dream — **Favorite food** — **Who you like** — **Skills**



Your profile (3)

Press Button B at each screen, then scroll to the item you want to edit with Button A.
Press Button B to enter the profile editing screen.
Use Button A to scroll through the options, then press Button B to select.
When you complete, press Button C to exit editing mode.

Settings — You can change the settings of the TAMAGOTCHI 4U itself!

Time Settings
Icon Background
Brightness Settings
Sound Settings

Scroll to the one you want to change and select it.

<Time Settings>

Change the time.

<Icon Background>

Change the design behind the icons.

<Brightness Settings>



Change the brightness of the screen.

<Sound Settings>

Turn the sound on or off.

Button A: darker — Button B: brighter — Button C: finish

●Weight

Tamagotchi will increase in weight by having meals and treats.
If it gets too fat, take it to the「うんどうじょう」"field" at the「こうえん」"park" to exercise lots to lose weight! (→P.19)

●Skills

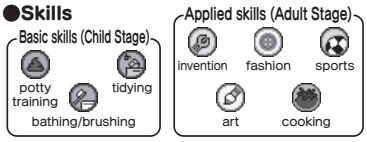

After learning skills, it will be able to do things like go to the toilet by itself, or to show off special skills to earn Gotchi points!
*Careful! Each skill can only be learned during a specific stage!

Be sure to take it to the toilet and the bath during its Child Stage!
Adult Stage skills can perhaps be learned at school!?

●Tama4U

While you're caring for your Adult-Stage Tamagotchi, it may give you a "Tama4U".
There are 4 kinds of "Tama4U" in all! If you get all the Tama4U, you can become the 'highest-level buddy' "TamaFriends" with that Tamagotchi!

●How to become "TamaFriends"

Find out what your Tamagotchi likes! Each Tamagotchi has food, equipment, and fashion that they like and dislike. Try giving it different things! Time is also needed to become TamaFriends.

●Once you become "TamaFriends"...!!!

When you get the four kinds of "Tama4U" and become "TamaFriends," it will be registered in your "TamaFriend Note!" (→P.21)

Connection — Play with different kinds of connection and downloading.

First, scroll to the connection you want and select it.



Greeting
Tamagotchi 4U
4U app
Touch spot

In **<Connection>**, you can play with these four types of connection!
「あいさツーしん」Greeting: trade profiles with another 4U (→P.12)
「たまごっち4U」Tamagotchi 4U: connection to play with another 4U (→P.12)
「4Uアプリ」4U app: connection with the 4U app, etc. (→P.14)
「タッチスポット」Touch spot: connection with a touch spot designed for Tamagotchi 4U(→P.15)

Directions and Cautions for Connection with another 4U

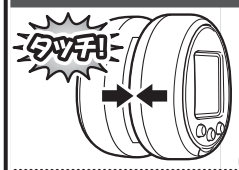

Touch the backs of both 4Us before starting connection.
*Be careful that neither 4U slips out of position.
*Connection with 4U series only.

Set only one device for connection!
Connection won't happen if both are set!

●Connection sender

"Touch" screen

If you set the connection, touch with the other 4U after the screen is as shown to the left.

●Connection receiver

If you wait for other device setting, touch with the other 4U while showing the regular home screen. Connection will fail? If it shows another screen.
*Excluding proposals (→P.13)

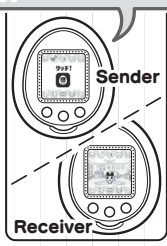

●Watch the screen during connection!

Don't move them apart until this screen disappears and the sound plays!

If this screen is shown, press Button B to return to the "Touch" screen and try again.

Greeting — Exchange profiles with your friends!

Connection with 4U

Approx. connection time: 2–3 sec.



Before the connection, select「プロフこうかん」"Exchange profiles"「する」"yes" (At the screen shown to the left). After the screen shows the "Touch" screen.
*The reciever must show the Regular home screen for connection!

Touch your 4U to the other one to start connection! The exchange is completed when the sound plays and your friend's profile will be shown!

After exchanging profiles, you can check your friendship chemistry!
Press Button B while your friend's profile is shown, then select「はい」"yes."
What will the result be? Could it be different on different days!?

Tamagotchi 4U — Use connection to play with your friends!

Connection with 4U



Connection game
Gift
Photo
Proposals

First, scroll to the connection you want and select it.

●Connection game (Model♥Dressup) — Cooperate to dress up a model!

Approx. connection time (first time): 11–12 sec.
Approx. connection time (second time): 10–12 sec.

If you are starting the connection, select this to show the "Touch" screen.
Then, touch your 4U to your friend's to start the connection game!
*The one receiving must be showing the regular home screen for connection!

Start planning dresses for the model!
Press Button A as many times as possible to collect items!
When the "Touch" screen is shown again, touch again to your friend's 4U.

The result will be announced!
If the outfit works, you'll get Gotchi points!

●Gift　Send items to your friend!

Approx. connection time: 14–20 sec.

Choose the type of item you want to give, then select the item. The "Touch" screen will be shown.
Touch your 4U to your friend's to start connection!
*The one receiving the item must be showing the regular home screen for connection!
*Items you won't lose after giving away. Meals and treats from the fridge, equipment, accessories, clothes
*Won't disappear if you give it: Mini-games, Going out destinations, Living rooms, Meals and Treats from the Café Restaurant

Give an item with this mark to your friend through GIFT command, and you'll get another lovely item! Try giving it to a friend!

●Photo　Take a photo with your friend as a keepsake!

Approx. connection time: 18–20 sec.

If you are starting the connection, select「する」"yes" to show the "Touch" screen.
*The one receiving must be showing the regular home screen for connection!
When yours is showing the "Touch" screen, touch your 4U to your friend's to start connection!
The photo will be saved in the memory icon「きねんしゃしん」"Photo (→P.22)" of both you and your friend.

●Proposals　Your Tamagotchi can marry your friend's♥

Approx. connection time: 12–15 sec.

To make a marriage proposal, select「する」"propose" to show the "Touch" screen. If you're want to accept the proposal, select「うける」"receive" to show the "Touch" screen. Touch the two 4Us together.

The first Tamagotchi will propose once the connection works!
If the other accepts the proposal, the two will be married! The next egg will appear in the room!
*Conditions for proposal: "The other Tamagotchi is of the opposite gender"
"Both Tamagotchis are in the Adult Stage"

4U App　Connect with NFC-capable smartphones!

Connection with a smartphone or a Bandai Data Spot (Japan only)

Download many items such as mini-games and various items using the 4U app.
You can download more kinds of items marked with [DL].

●How to download　The 4U app is available in Japanese only.

Connecting

If the connection works, the downloaded item is saved to its destination.

It will show up in its download destination or menu!

*If the store items have reached the maximum number, you can delete items to save new items.

●Download destination

Downloaded items will be saved to the destination as shown in "...". Also, a heart icon will appear on the icon of the destination.

●Mini-game→"Game corner"
●Living room→"Redecorating"
●Equipment→"Item shop"
●Clothes→"TamaFashion"
●Accessories→"TamaFashion"
●Meals→"Café Restaurant"
●Treats→"Café Restaurant"
●Going out→"Going out"
●Seasonal decorations→"Notebook"
●Childrearing books→"Notebook"
●Coupon→"Treasure box"
●TamaBingo→"Treasure box"
●TamaGashapon→"Odekake connection"

····· 4U App Download Page ·····

http://tamagotch.channel.or.jp/tamagotchi/4u/dl/app.html

*Please note that any network fees, connection costs, etc. must be paid for by the customer.
*The 4U app is not compatible with all devices. Please check the webpage at the address above.
*Always enjoy the 4U app with a guardian.

*The 4U app is compatible with use in Japan only. It can be used only on compatible models of smartphones for Japan. The 4U app is available in Japanese only.

Download From Bandai Data Spot All Over Japan!

You can also download mini-games and various items from Bandai Data Spot, located all over Japan.
See the official Tamagotchi website below for details and how to play.

http://tamatv.com

※The official Tamagotchi website is available in Japanese only.

Touch Spot　Touch with a Touch spot designed for Tamagotchi!

Find this logo and touch!

TOUCH SPOT

You can touch to Touch spot designed specifically for TAMAGOTCHI 4U.

When this screen is shown, touch your device with the Touch spot!
Don't remove from the Touch spot until this screen disappears and the sound plays!
If the connection works, you can download items and see fun features!

●Touch spot with more than one item

Press Button A on the item selection screen to scroll through the options. Press Button B to select and save!

Get information on the official website for details.

http://tamatv.com

※The official Tamagotchi website is available in Japanese only.

Odekake connection

DL　See P.14 about downloading!

Connect with a Bandai Data Spot or a NFC-capable smartphone to play!



You can download and play games only available on Odekake connection ("TamaBingo" and "TamaGashapon")!
Get information on the official website for details.

http://tamatv.com

※The official Tamagotchi website is available in Japanese only.

Feed　Give your Tamagotchi food when it is hungry, or the happiness level is low!

DL　See P.14 about downloading!

Choose to the place you want to go to and select it.

Then, select what you want to feed your Tamagotchi. Some have likes and dislikes, so try many kinds!

*Gotchi points are required for food at the「カフェレストラン」"Café Restaurant." The ones labeled "FREE" are available without charge.

Types of food in the fridge　=increases tummy meter　=increases affection level

●Treats increase the affection level! Some might also fill the tummy meter!?
●Scold it if it's supposed to be eating but is playing around!

Communication　Praise and scold your Tamagotchi, or give it treatment! You can also ask a TamaSitter to come take care of it!

First, scroll to what you want to do and select it.

When Communication is Needed

*Sometimes, the timing may be too late.

●「ほめる」Praise

If it tells you「できたよ」"I did it," make sure to praise it by choosing「ほめる」right away!

●「しかる」Scold

If it does something bad, scold it right away!

●「はなしかける」Talk

It will reply when you talk to it.
If your Tamagotchi starts to pack up, talk to it many times to convince it to stay!



●「いたわり」Comfort

If Tamagotchi becomes like as shown to the right, quickly select「いたわり」"Comfort"
*One time may not cure it.

Sick　Toothache　Timid

Professional Babysitter "Sitter-Poketchi"

Call a TamaSitter, and she will take care of your Tamagotchi for you! Call her when you are not available to take care of it! Select「たまシッター」"TamaSitter." Sitter-Poketchi will come to take care of your Tamagotchi!

- ●Sitter-Poketchi is available from 7:00 to 16:59. She will leave at 17:00.
- ●If you want to take over its caring from Sitter-Poketchi, press any button at her caring screen and select「はい」"yes".
- ●She cannot take care of a Tamagotchi in its Baby Stage, or when it is timid or sick, having a toothache, or packing up.
  Neither can she take it when its tummy meter or happiness level is at zero.

Good-bye

If your Tamagotchi has left and the screen shows the good-bye letter, press Button A.

Good-bye letter screen

- ●If you want to raise a new Tamagotchi after that, press Button A while holding Button C. A new egg will appear in the room, and a Tamagotchi will be born after about a minute!

*Items etc. will be passed on to the new Tamagotchi. (There are some elements which will not be passed on.)

Rooms

Care for your Tamagotchi in different rooms inside house, such as「トイレ」"toilet" and「おふろ」"bath!"



Scroll to the place in the house you want to take it to and select it.

●Toilet

If it poops, flush it for him/her!
If your Tamagotchi is restless, wanting to poop, select「トイレ」"toilet" and take it to the toilet!

●Bath, brushing

Take your Tamagotchi a bath and make it clean! Brush his/her teeth in the bath to prevent toothaches!

●Cleaning locker

If the rooms gets dirty, take your Tamagotchi to the cleaning locker and clean the room!

If your Tamagotchi is being restless, could it be wanting to do something!? Provide the care it needs, and praise it if it did it correctly!
("Praise"→P.16) If it learns how to do it, could it do it alone next time!?

●Closet

You can put「ようふく」"clothes" and「アクセサリー」"accessories" on your Tamagotchi in the closet! It can wear accessories at the Child and Adult Stage, but it can wear clothes only at the Adult Stage.

- ●You can find the clothes and accessaries you've bought at TamaFashion here.
- ●Choose closet also when you want to remove clothes or accessories.
- ●You can save 20 accessories and 10 clothes.
- ●Tamagotchis who can't put on clothes and accessories will still enjoy looking at them!

Going out

Have fun at different places and shops! DL

Scroll to the place you want to go to and select it.

- ●Get new places to go by downloading them from the 4U app, Bandai Data Spots, or Touch spots!
- ●You'll get more going out destinations the more you use connection!

NEEDED You need Gotchi points (money on Planet Tamagotchi) at places with the mark on the left.

TamaMall

DL See P.14 about downloading!

Many different stores are in TamaMall!
Scroll to the store you want to go to and select it.

"ゲームコーナー"Game Corner

Earn Gotchi points by playing games!

"おたからザクザク" Treasure Treasure

There are three glowing bamboos. Guess which one holds the treasure!
Choose the bamboo you want to chop and select it. If you find treasure: success!
Try again if you find nothing.
Find treasure three times to clear the game!
It's game over if you find Dododotchi.

Dododotchi

Button A: Choose the bamboos Button B: select Button C: cancel the game

"ケーキできるかな" Make-a-Cake

Cheese Milk

Memorize the order of cheese and milk to make cake!
Remember the order the ingredients are given, then press the buttons in the same order after「キャッチ」"catch" appears! Succeed six times in a row to clear the game!
If you press the buttons in the wrong order, or don't press during the time limit after "catch" appears, it's game over!

Button A: cheese Button B: milk Button C: cancel the game

"リフォーム" Redecorating

Redecorate your living room!

NEEDED

Redecorating will change the atmosphere of your room!

"アイテムショップ" Item Shop

Buy many kinds of equipment!

NEEDED



Lots of many kinds of equipment♥

"たまファッション" TamaFashion

Buy clothes and accessories!

NEEDED

Lots of fashionable clothes and accessories♥
*The number you can save is different depending on the type of the item.

Park



Scroll to the place you want to go to and select it.

Square

Different events will happen!



Chatting Meeting a TamaFriend Morning market Clean day

Field

Exercise (play a minigame) to lose weight!

ダンス☆ゲーム Dance☆Game

Teacher Mitchi

Heart A Heart B

Follow Teacher Mitchi's lead to dance!
Hearts marked A or B will appear on the screen, so remember the order. Next, when「ダンシング!」"Dancing!" appears, dance by pressing the buttons in the order you remembered! You can earn Gotchi points according to how well you did.
Successfully dance 10 times in a row without making a mistake to clear the game!
If you press the wrong button, or don't press within the time limit, it's game over!

Button A: Heart A
Button B: Heart B
Button C: cancel the game

School

Join a class to learn a skill!

You can join a class if you go to school in the Adult Stage or later. Scroll to the class you want and select it.

At the end of class activities, you will be shown the item you will need to bring to the next session. Buy it in the Item shop at TamaMall, and be sure to bring it next time!
*It's important to attend many times!

Matchmaker

You can have an arranged marriage!

You can choose your marriage partner if your Tamagotchi is 4 and above.

Cursor

After hearing their introductions, move the cursor to the one you want to be introduced to and select it.

Button A: move the cursor Button B: select

Make sure it's the one you want, then select「する」"yes."

After the two introduce themselves and get married, an egg will appear in the room!
Your life with a new Tamagotchi will start.

Treasure Box

The items you've acquired are saved here!



First, scroll to the kind of item you want to look at and select it.



Scroll to the item you want to use and select it.

- ●You don't lose the items when used, but you'll lose it if you give it via a connection away. (Some items can't be given.)
- ●Only one of each kind of special item will be saved.
- ●You can save 25 kinds of equipment, 5 kinds of special items, and 1 each of bingo cards and coupons.

●Sample items!

Each Tamagotchi has items it likes and dislikes!
*You can have up to 3 of the same equipment.

Equipment: Tennis racket, Mirror
Special: Eco-badge

*To delete an item, scroll to it and select「けす」"delete." All of that item will disappear, regardless of how many you had. For example, if you had three of that item, all three will be deleted.

Memory



Seasonal Decoration

First, scroll to the information you want to look at and select it.

●If something new has been added to a notebook, there will be a heart icon on the [ ] icon!

TamaFriend Note — A record of the Tamagotchis you've become TamaFriends with!

Gender

Age when it became your TamaFriend

*TamaFriends are not deleted from your TamaFriend note, even after they have left.

Button A: move to next page

Friend Note — A record of the friends you've used connection with!

Button A: move to next page

You can save up to 30 friends in your Friend note. Even if you use connection with new friends, the 31st and newer won't be recorded until you create some empty slots using「おわかれ」"Good-bye" (→P.22).

Friend's Tamagotchi

Gender of friend's Tamagotchi

Friend's name

Button B



Friend's name

If you've only used greet-connection with that friend, this screen will be shown.

Detail selection screen

Press Button B in the Friend note screen to enter the detail selection screen for that friend. Scroll to and select what you want to look at or do!

●Profile

Button A: move to next page

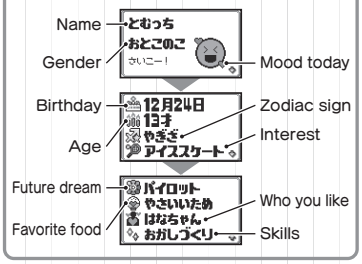

●Edit messages

Create and edit messages for your friend. Completed messages will be sent when you connect with that friend for "connection game," "Gift," or " photo."

●Message history

Messages you've exchanged with your friend, shown newest first.
*To delete a message, scroll to it, then press Button B and select「けす」"delete."

*If you delete a friend from your Friend note, your messages with that friend will also disappear!

Button A: move to next page

●Good-bye

Good-bye selection screen



To delete the selected friend from your Friend notebook, select「する」"yes" from the Good-bye selection screen.

Photo — Photos you took with a friend during connection are saved here.

You can see next pic by pressing Button A.
*To delete a photo, show it, then press Button B and select「けす」"delete." See P.13 for how to take photos!

Added Characters Note — You can add the types of Tamagotchi you can raise!



If you download new characters, you can nurture the new Tamagotchi!

DL See P.14 about downloading!

●Up to 8 new Tamagotchi characters of Added Character Note can be saved.
*Get Added Character Note from "Connection," either from the "4U app" (→P.14) or a "Touch spot" (→P.15)!



First, scroll to the Added Character Note you want to look at and select it. Select「はい」"yes" if you want to read that book,「けす」"delete" if you want to delete it.
*Once you delete an Added Character Note, you won't be able to raise that Tamagotchi anymore.

You can see the information about the Tamagotchi you can nurture, and hints for bringing it up!

Button A: move to next page
Button B: select

You'll get more New Tamagotchis you can nurture through the connection!
Once you can get new, the silhouette will change to a drawing of that character. Check it out!

Seasonal Decorations — You can decorate your living room according to the season!

DL See P.14 about downloading!

If you have a「きせつかざり」"Seasonal Decoration," it will automatically decorate the living room when the date for it arrives!
*Get "Seasonal Decorations" by "Connection," either from the "4U app" (→P.14) or a "Touch spot" (→P.15)!

*To delete a "Seasonal Decoration", scroll to it, then press Button B and select「けす」"delete."

Replacing Batteries

Kandentchi's notification

When your battery has worn down, Kandentchi will let you know. When this screen is shown, you won't be able to do anything. Follow the directions in "First... The Birth of Tamagotchi" (→P.5) to replace both batteries with new ones.



If you select「つづきから」"continue," you can resume taking care of the Tamagotchi you already have.
***Be careful! If you select「データをけす」"delete data," all data will be deleted and reset to factory settings.**
***Deleted data is not guaranteed.**

●Change batteries when...

The batteries may become worn out during continuous play and the following could happen instead of "Kandentchi's notification" being shown. If this happens, replace the batteries and follow the directions in "Replacing batteries" above.

●The screen becomes all dark or shows nothing ●The sound becomes quieter ●The screen flickers or otherwise malfunctions

Removing and Attaching Covers

***Remove cover only to attach the " TAMAGOTCHI 4U Cover" sold separately. Do not remove at other times.**

<To remove cover>
①Place your finger on the ☆part of the cover, and pull in the direction of arrow ① to remove the cover.
*Careful! Don't use fingernails. You may get hurt.

<To attach cover>
❷Insert claws on the cover into the notches on the body, and set in the direction of arrow ❸.
*Make sure there is no gap between the cover and the body.

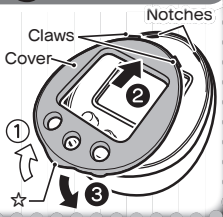

Troubleshooting

●Connection with another TAMAGOTCHI 4U doesn't work!

→TAMAGOTCHI 4U cannot connect with models in the Tamagotchi series which are not 4U.

→Make sure that the receiver's 4U shows the regular home screen. *Excluding proposals

The one starting the connection

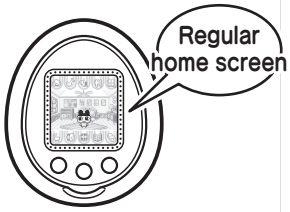

The one receiving the connection

→Do not move until the "touch" screen disappears or the "connection complete" sound plays.

→Strong radio waves or metal present in the area may obstruct connection.

●It's hard to see the LCD screen!

→Adjust the brightness of the screen. (→P.10)

●There's no sound!

→Make sure that the sound setting is set to「オン」"on." (→P.10)

●The screen is black (or is showing nothing), or there's no sound, and pressing the start button doesn't do anything!

→The battery may be worn out.
(Sometimes, the battery wears out before Kandentchi (→P.23) can be shown.)
Follow the directions in "Replacing batteries" above to replace the batteries.

●Tamagotchi won't get up! or won't go to sleep!

→Tamagotchi gets up and goes to sleep by itself at times you set. Check on the clock screen that the time has been set correctly. (→P.7)
If AM/PM is reversed, Tamagotchi's day and night will also be reversed.

●What date would be shown on February 29 during leap years?

→The date setting on the 4U does not automatically apply "leap years."
On February 29th during leap years, please change the "time settings" to February 29 (→P.10). Everything will work as usual from March 1.
*Please check that the date and time are correct, as events may happen on birthdays and commemorative days.

The Start Button

●Please press the start button if the 4U stops functioning or the screen is not as normal after a strong blow to the body, etc.
*If nothing shows on the screen after pressing the start button, remove the batteries and insert them again.

Press the start button, and the continue/delete data selection screen will be shown.
*After opening and closing the battery compartment door, the start button will be pressed automatically, and the continue/delete data selection screen will be shown.

Continue/delete data selection screen

●If you want to continue taking care of the Tamagotchi you already had, select「つづきから」"continue." After the normal screen is shown, go to「じかんせってい」"time settings" (→P.10) and set to the current date and time.
●If you want to start from the bigining, select「データをけす」"delete data."
Then, set the time, birthdate, and name, and a Tamagotchi will hatch from a new egg.
***Be careful! If you select「データをけす」"delete data," all data, including "Notebook," "Treasure box," "Tama4U," and "Messages" will be deleted and reset to factory settings.**

Notices about Downloading

●I can't download from the 4U app

→Please check the list of compatible models on the official website (→P.27).
→Is the NFC function on the smartphone turned on?

●I can't download from the 4U app/the touch spot

→Strong radio waves or metal present in the area may obstruct connection.

●「アイテムがいっぱいだよ!」"You have too many items!" was shown when I tried to download.

→Each kind of item has a maximum number you can save. Delete saved items from stores (such as TamaFashion and Item shop) or saving destinations to reduce what you have. Then, you will be able to download new items. (→P.20)

Try touching a TAMAGOTCHI 4U showing its regular home screen to a NFC device like a Bandai Data Spot or a NFC-capable smartphone!
*The NFC function on the smartphone must be turned on for connection to work.
See the official Tamagotchi website below for details and how to play.
The official Tamagotchi website is available in Japanese only.

http://tamatv.com

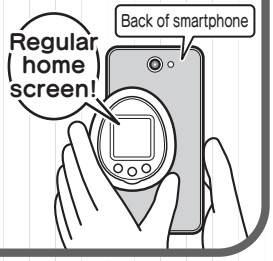

TAMAGOTCHI 4U is designed for Japan.
We are unable to answer inquires about its use overseas.